



# adp SERIES-COLUMN TYPE




- HMI touch screen panel




- For Plunge & Pitch grinding For Surface grinding & Criss-cross grinding

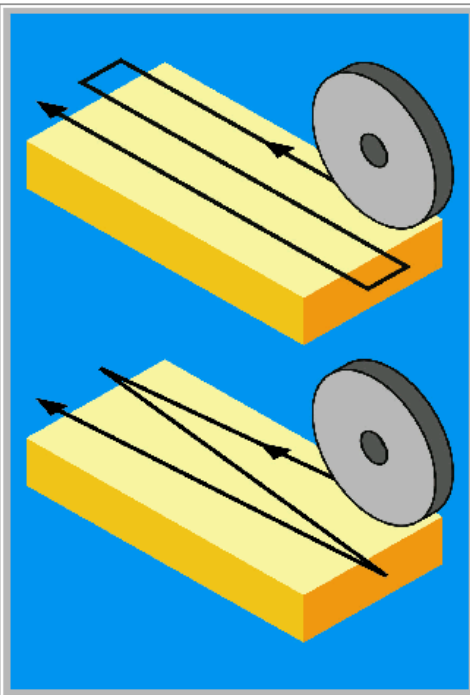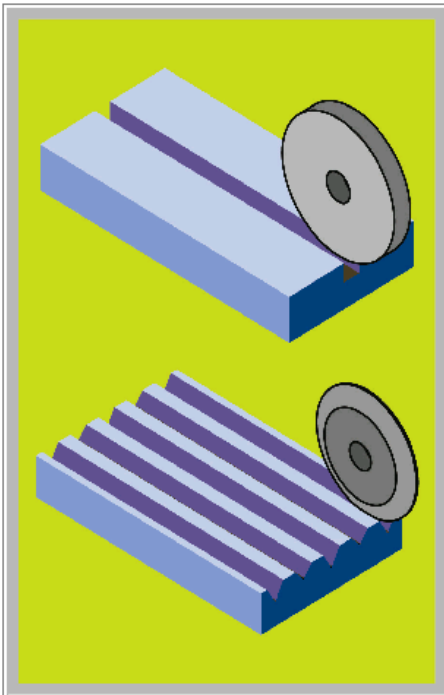

- **Setting screen for Plunge & Pitch grinding**

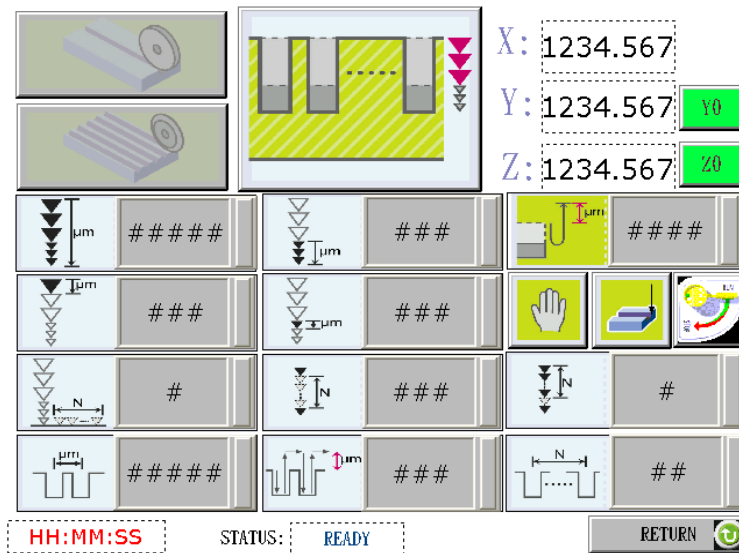

- **Setting screen For Surface grinding & Criss-cross grinding**

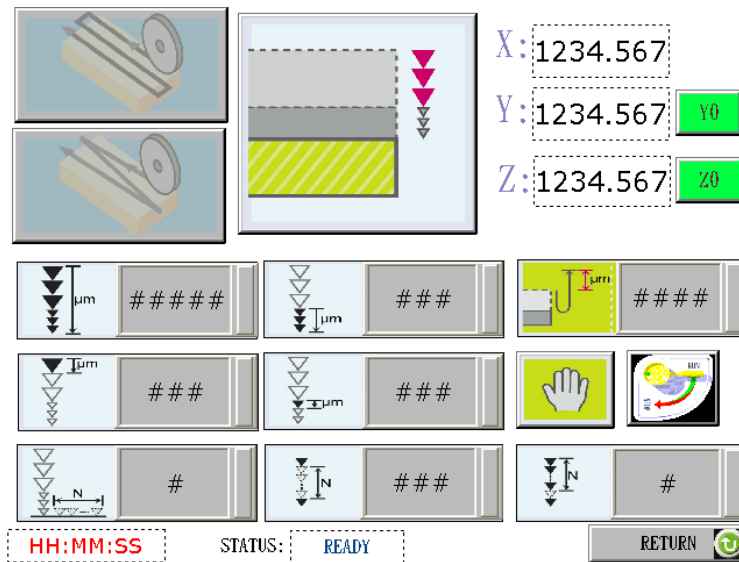

- **Auto dressing and compensation (Diamond dresser on the table)**

